



Hoist Components:

On/Off switch is top press button
Red LED lit when On
Switch Off before shutting tailgate

Controller has magnetic mount to upright for stowage
Controller arrowed push buttons for up/out/in/down



Scoot Components:

Brake lever locks/unlocks rear axle

Hoist strap buckles fit over lifting points, pushed on then pulled up to secure clip

Column angle can be adjusted when screw handle is undone a couple of turns to unlock teeth

Steering lock secures in straight-ahead when pressed in and turned vertical, stops column swinging when loading/unloading



Unloading:

(loading is reverse of sequence)

Fold out mat
Turn On hoist
Hoist up to take weight off wheels



Hoist out to swing scoot from car
Control back of scoot to keep level
Swing out parallel with rear of the car



Hoist down to lower scoot to ground and straps slack
Unclip straps (push clip down) to release scoot
Hoist up then Hoist in to stow
Turn Off hoist, fold in mat, then close Tailgate



Set up Scoot:

(packing to load is reverse of sequence)

Loosen column angle adjuster, pivot column to upright, tighten adjuster to lock
Take scoot seat from car (rear seat), put peg into seat post, swivel straight
(side lever of seat slots into one of the slots on top "cog" of post)
Undo steering lock (turn anti-clockwise to horizontal)
Undo brake lever (push forward) to allow free-wheel
Push scoot to driver's door