Control Unit Design

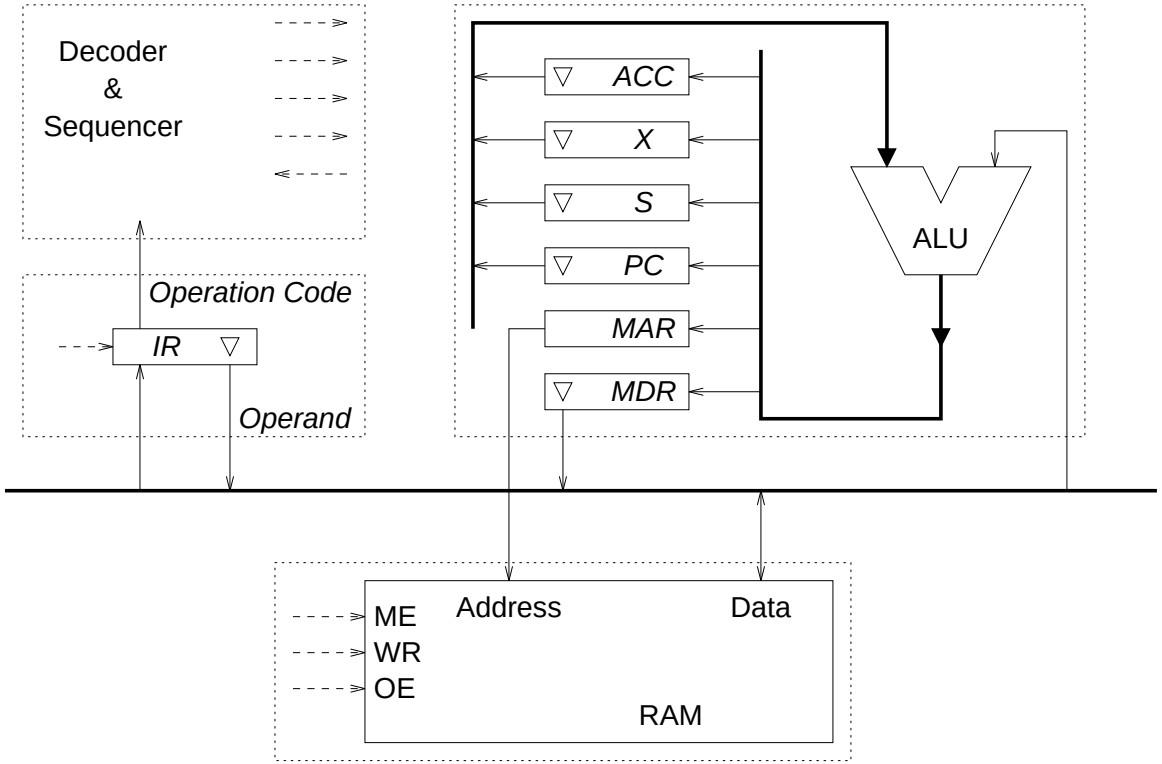

Control Unit Design

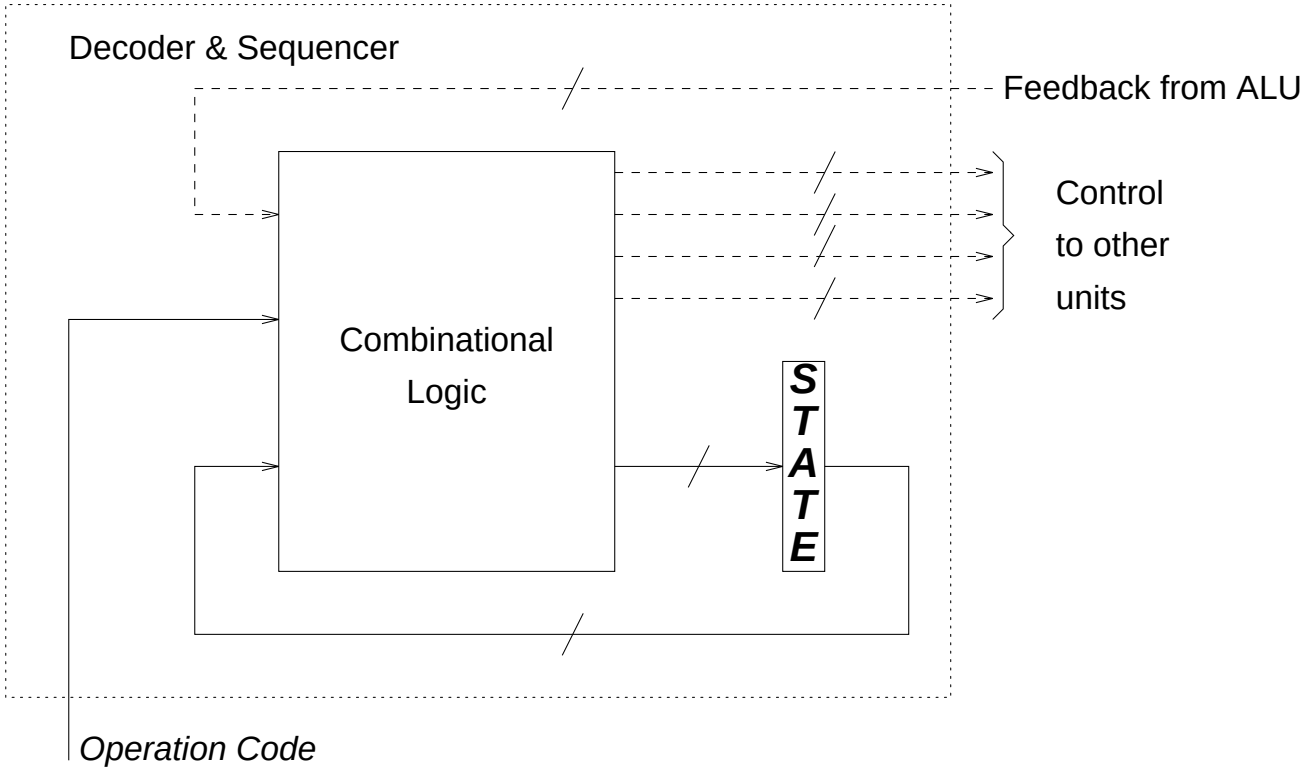

Control Unit Design

- Control
  - Memory Bus
    Enable_MDR, Enable_Op, OE, Load_IR, WR.
  - Register O/P Bus
    Enable_ACC, Enable_X, Enable_S, Enable_PC.
  - Register I/P Bus
    Load_ACC, Load_X, Load_S, Load_PC, Load_MAR, Load_MDR.
  - ALU
    F0-F5 (ALU_function), Multiword, Plus_1, Arithmetic_Shift.
    Update_C, Update_V, Update_N, Update_Z.
- Feedback
  - Condition Codes
    C, V, N, Z.

Instruction Set Summary

- Arithmetic Instructions

	Inherent #3 +*w*	Immediate #3 +*w*	Direct #4 +*2w*	Indirect #5 +*3w*	Indexed #4 +*2w*	Indexed Indirect #5 +*3w*	Stack (pull) #5 +*2w*
CLR	●						
INC	●						
DEC	●						
NEG	●						
COM	●						
LSL	●						
LSR	●						
ASR	●						
ROL	●						
ROR	●						
ADD		●	●	●	●	●	●
SUB		●	●	●	●	●	●
ADC		●	●	●	●	●	●
SBC		●	●	●	●	●	●
AND		●	●	●	●	●	●
OR		●	●	●	●	●	●
EOR		●	●	●	●	●	●

Instruction Set Summary

- Load Register from Memory

	Immediate #3 +*w*	Direct #4 +*2w*	Indirect #5 +*3w*	Indexed #4 +*2w*	Indexed Indirect #5 +*3w*	Stack (pull) #5 +*2w*
LDA	●	●	●	●	●	●
LDX	●	●	●			●
LDS	●	●	●	●	●	

- Store Register to Memory

	Direct #4 +*2w*	Indirect #5 +*3w*	Indexed #4 +*2w*	Indexed Indirect #5 +*3w*	Stack (push) #4 +*2w*
STA	●	●	●	●	●
STX	●	●			●
STS	●	●	●	●	

Instruction Set Summary

- Control Transfer Instructions[1]

	PC Relative		Direct		Indirect		Stack (pull)
	#3 +*w*	#5+*2w*	#3 +*w*	#5+*2w*	#4 +*2w*	#6 +*3w*	#5 +*2w*
BRA	●						
BRN	●						
BCC	●						
BCS	●						
BVC	●						
BVS	●						
BEQ	●						
BNE	●						
BLT	●						
BGE	●						
BGT	●						
BLE	●						
BSR		●					
JMP			●		●		
JSR				●		●	
RTS							●

[1]note that the BSR & JSR are identical to the BRA & JMP instructions except that BSR & JSR store the old PC value on the stack for later retrieval by RTS.

Control Unit Design

- Complexity

  Consider the complexity for an implementation using synchronous memory[2]:

  – 28 Control signals
  – 4 Feedback signals
  – 8-bit State (201 States)
  – 7-bit Opcode (97 Operation Codes)
    - - 39 Instructions
    - - 9 Addressing Modes

Combinational logic has 19 (4+7+8) inputs and 36 (28+8) outputs.

[2] $ME = \overline{CLK}$ hence no wait states

Control Unit Design

- Options
  - Hardwired Logic
    Computer assisted formal methods for random logic
    Large & complex
  - PLA
    More compact
    Size limited – even this problem is too big for a single PLA
  - Microcode
    Simple implementation of complex control task
    Control is reduced to a software problem

Control Unit Design

- Microcode

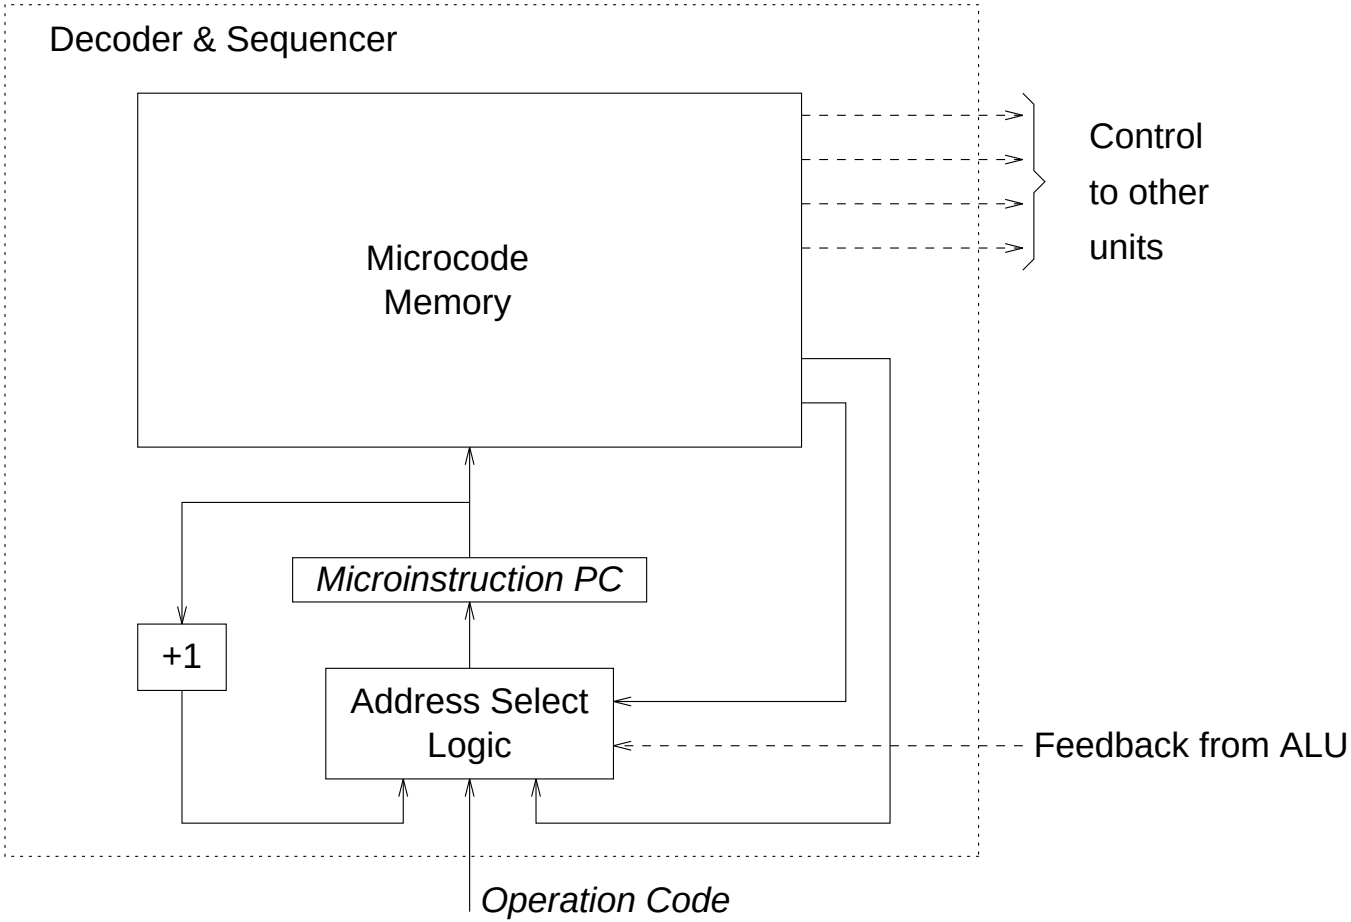

Control Unit Design

- Microcode Instructions

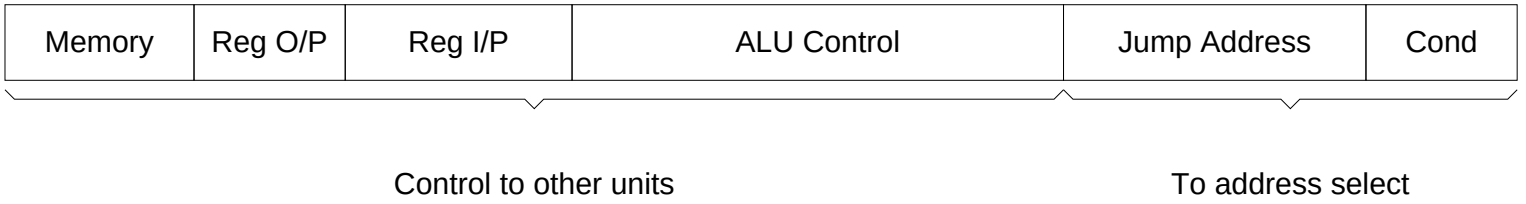

  - a new microinstruction is executed every cycle
  - each instruction contains all the control signals required during a particular clock cycle
  - the signals are usually arranged into fields according to function

Control Unit Design

- Microcode Execution

  Operation code maybe simply a microcode address.

  In each cycle the Microinstruction Program Counter may be loaded with one of the following:

  - μPC + 1
    execute next microinstruction (default)
  - Opcode
    begin execution of next macroinstruction after instruction fetch
  - Jump Address
    jump to another section of microcode – may be dependent on ALU feedback

Control Unit Design

- Field Encoding

  Even for this simple example we have a very wide microinstruction. To reduce the size of the microcode memory it is usual to encode the microinstruction fields.

  Since only one register may drive the Register O/P bus we can encode the field from four bits down to two[3]:

Encoded Field		
0	0	Enable_ACC
0	1	Enable_X
1	0	Enable_S
1	1	Enable_PC

[3]although the microcode memory is now smaller we will need some form of additional decoding

Control Unit Design

- Two Level Microcode

  Many microinstructions will have the same control signals. With a two level microcode/nanocode system we can merge such instructions.

  - Microcode
    - - large number of narrow microinstructions
    - - controls sequence of microinstructions
    - - controls selection of nanoinstructions
  - Nanocode
    - - small number of wide nanoinstructions
    - - provides control to other units

Control Unit Design

- Nanocode System

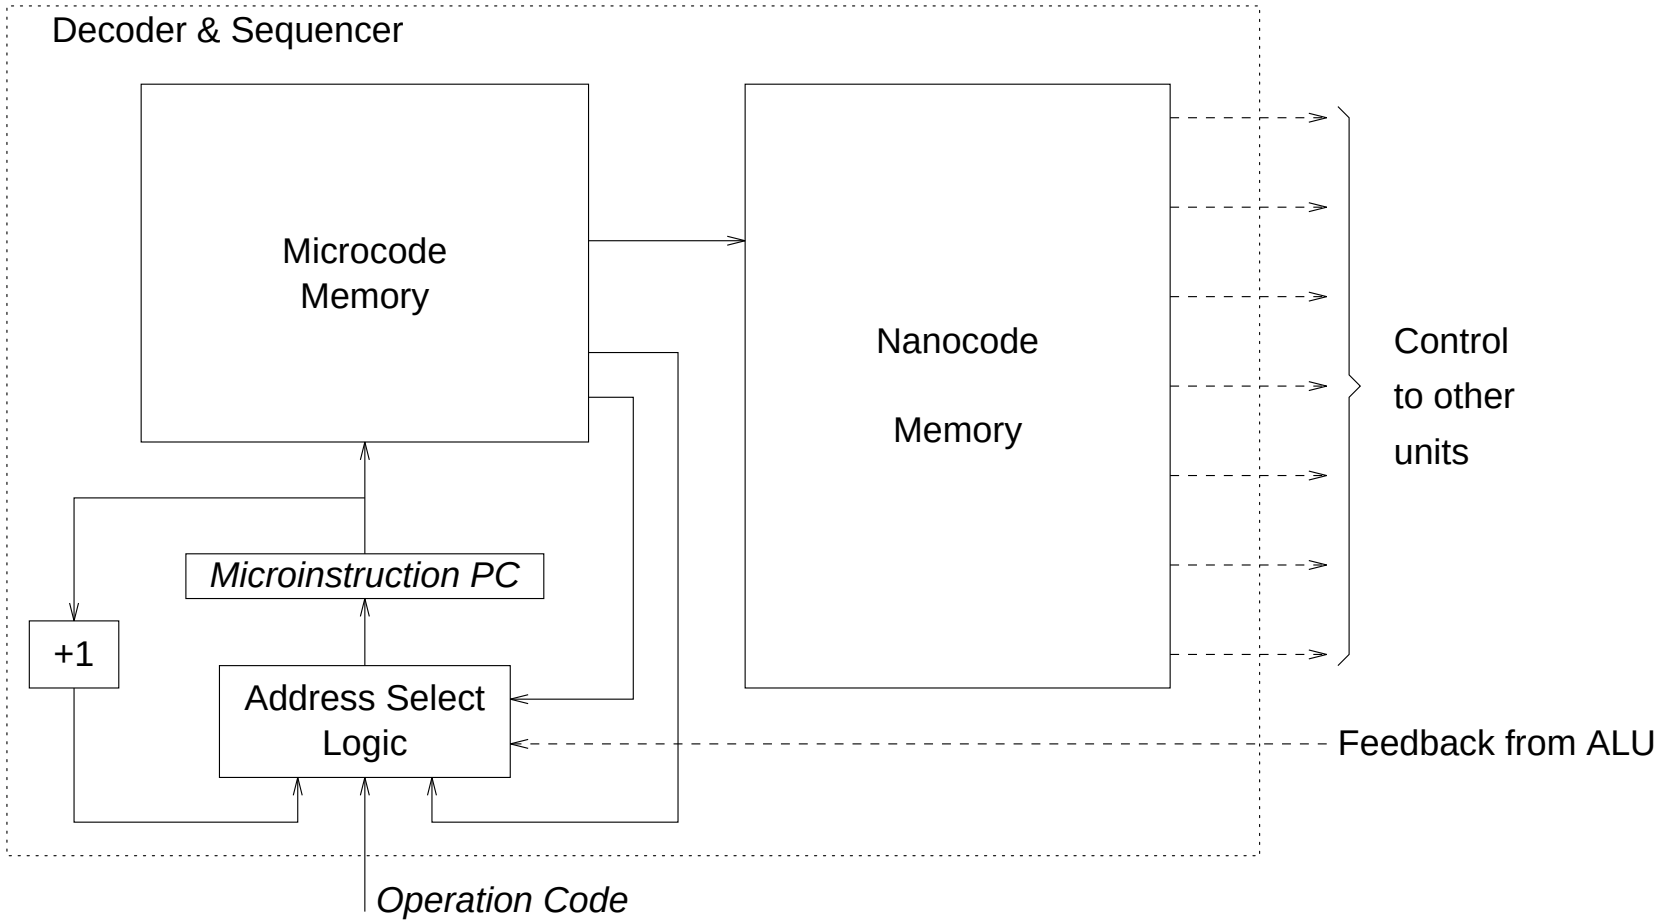

Control Unit Design

To simplify the control unit for use in high clock rate modern microprocessors we can first separate the tasks of sequencing and decoding:

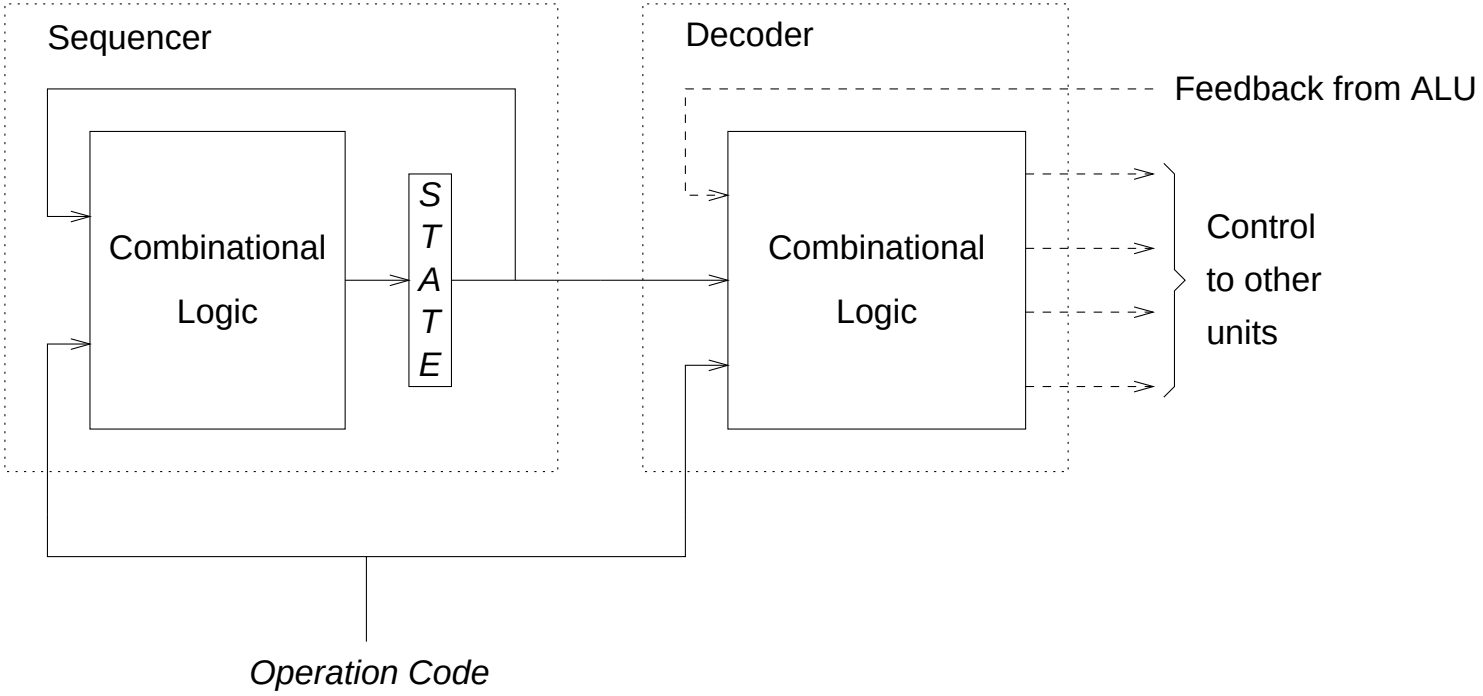

Here the sequencer merely keeps track of instruction execution.

Control Unit Design

- The majority of the controller state is in the instruction register.
- Careful choice of opcodes can significantly reduce decoder complexity[4].

Macroinstruction fields

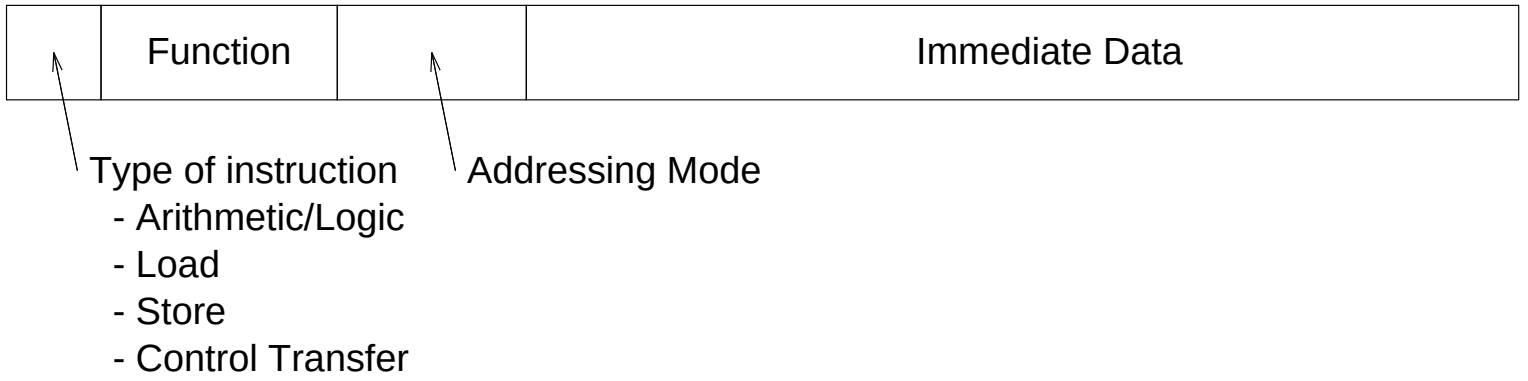

Division of the instruction into fields will simplify the decoder and sequencer at the expense of a less efficient instruction coding. The best results are obtained for RISC style architectures.

[4] choice of opcodes is now a problem in state allocation.

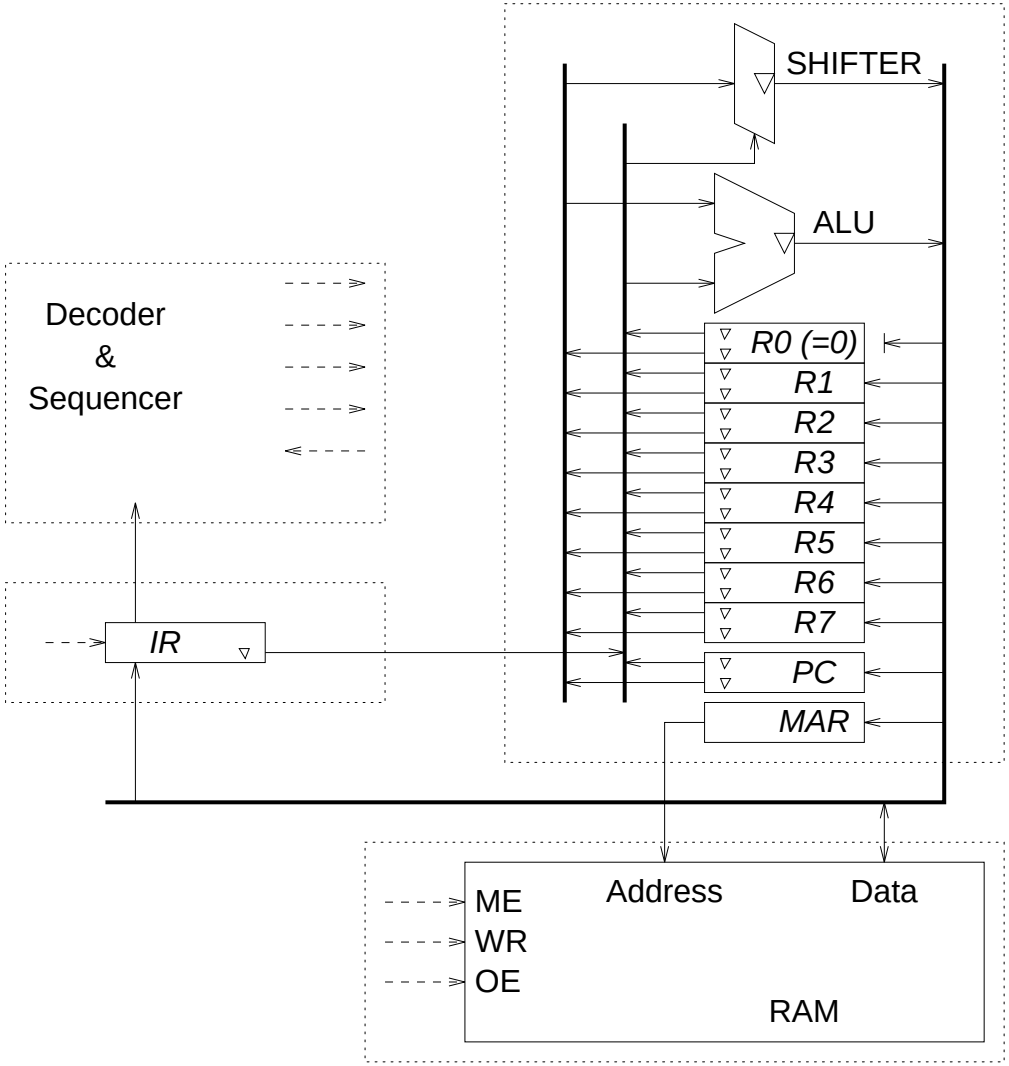
SHIFTER
ALU
Decoder
&
Sequencer
R0 (=0)
R1
R2
R3
R4
R5
R6
R7
PC
MAR
IR
ME
WR
OE
Address
Data
RAM

Typical RISC

- Register register architecture
- Few instructions
- Very few addressing modes

The processor described here is based on a subset of the SPARC specification[5].

[5]note that SPARC is not an architecture only a specification based around a complete instruction set

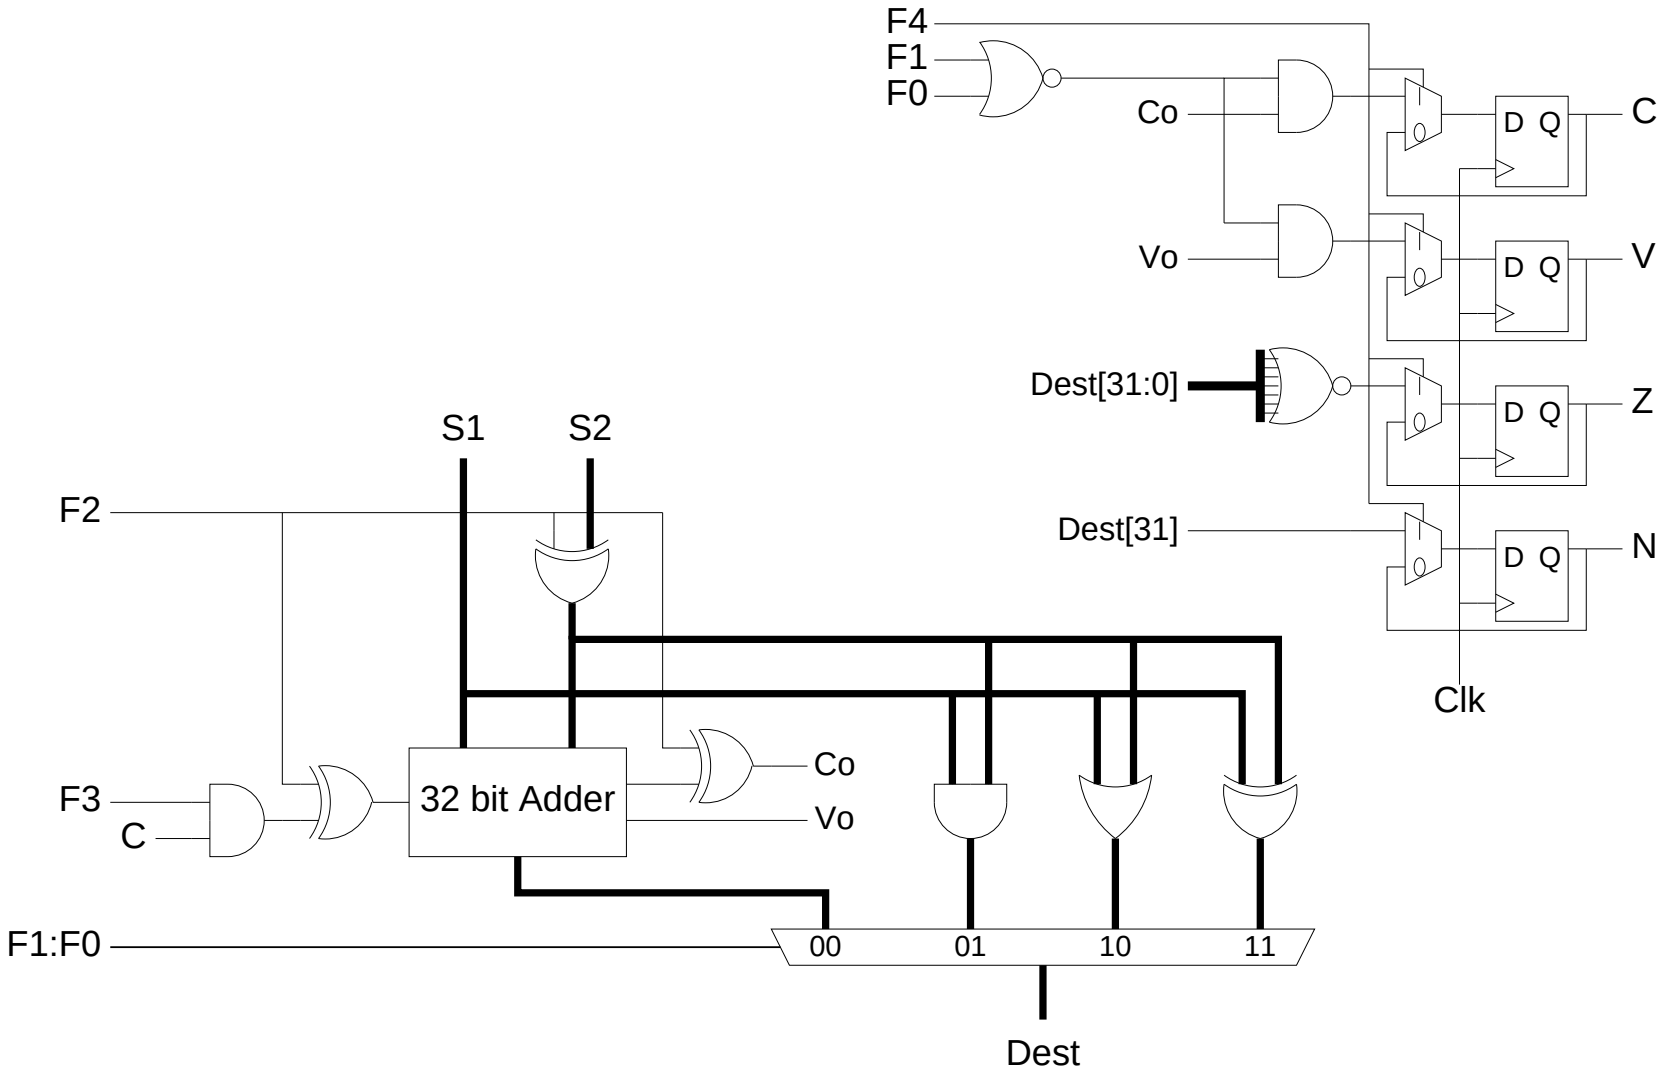
F4
F1
F0
Co
Vo
Dest[31:0]
Dest[31]
D Q
C
V
Z
N
Clk
S1
S2
F2
F3
C
32 bit Adder
Co
Vo
F1:F0
00
01
10
11
Dest

The ALU supports a small number of functions based on only five control signals.

A separate barrel shifter supports three simple shift instructions.

ALU instructions

F4:F3:F2 \ F1:F0	0 0	0 1	1 0	1 1
0 0 0	ADD	AND	OR	XOR
0 0 1	SUB	ANDN	ORN	XNOR
0 1 0	ADDX			
0 1 1	SUBX			
1 0 0	ADDcc	ANDcc	ORcc	XORcc
1 0 1	SUBcc	ANDNcc	ORNcc	XNORcc
1 1 0	ADDXcc			
1 1 1	SUBXcc			

Shift instructions

SLL SRL SRA

RISC

- All ALU and shift instructions take two operands (either two registers or one register and one immediate) and return a single register result.

  `SUBX R3,R7,R5` $\quad R5' \leftarrow R3 - R7 - C$

  `ADD R4,5,R1` $\quad R1' \leftarrow R4 + 5$

  – for special cases we have a pseudo register, $R0$, which always contains zero.

  `SUB R0,R2,R2` $\quad R2' \leftarrow -R2$

  – we may even execute an instruction merely for its side effects

  `SUBcc R5,201,R0`

Instruction Format

- Arithmetic and logic instructions contain all the relevant fields for register selection and ALU control.

  The decoder is responsible for enabling these fields during the correct cycle.

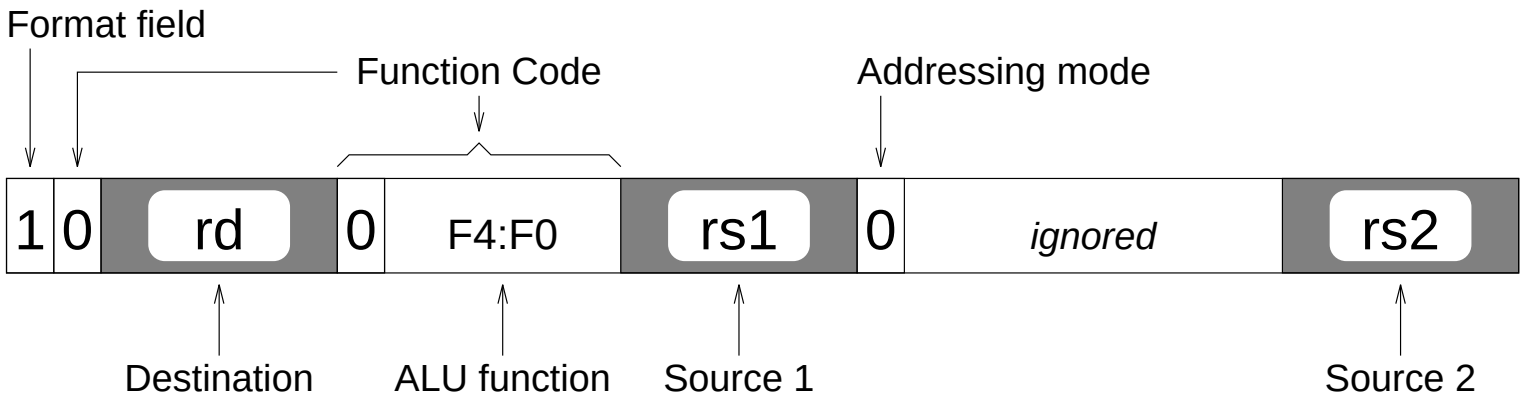

Variable Instruction Format

The use of variable fields allows us to specify more information within a limited instruction width[6].

For simplicity the signed immediate may only be used on the **s2** bus.

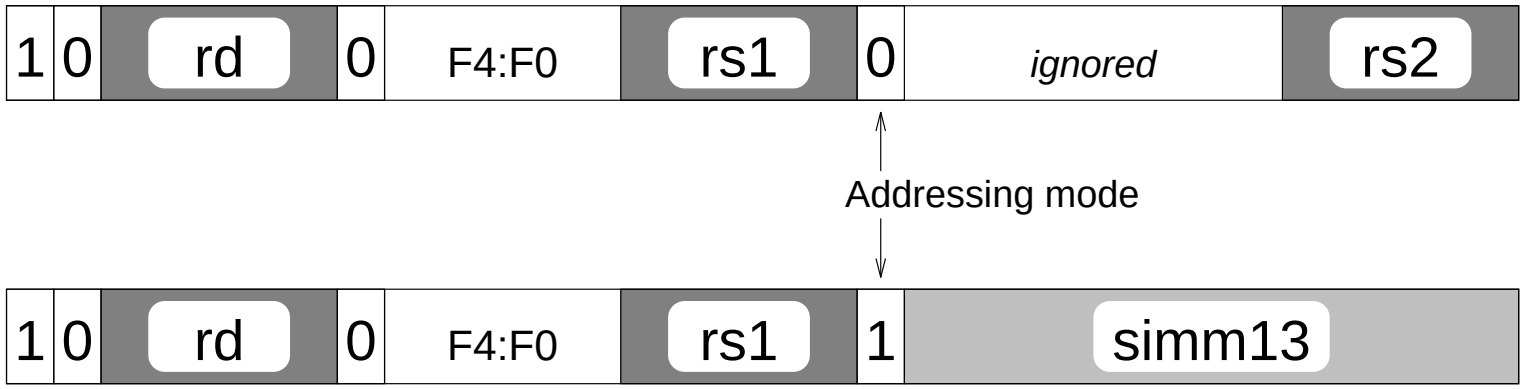

[6]note that the **rs2** field is not always present but when present it is always in the same place.

RISC

- Shift instructions are indicated by a different function code.

  The decoder will use a part of the function code in order to select which functional unit drives the destination bus.

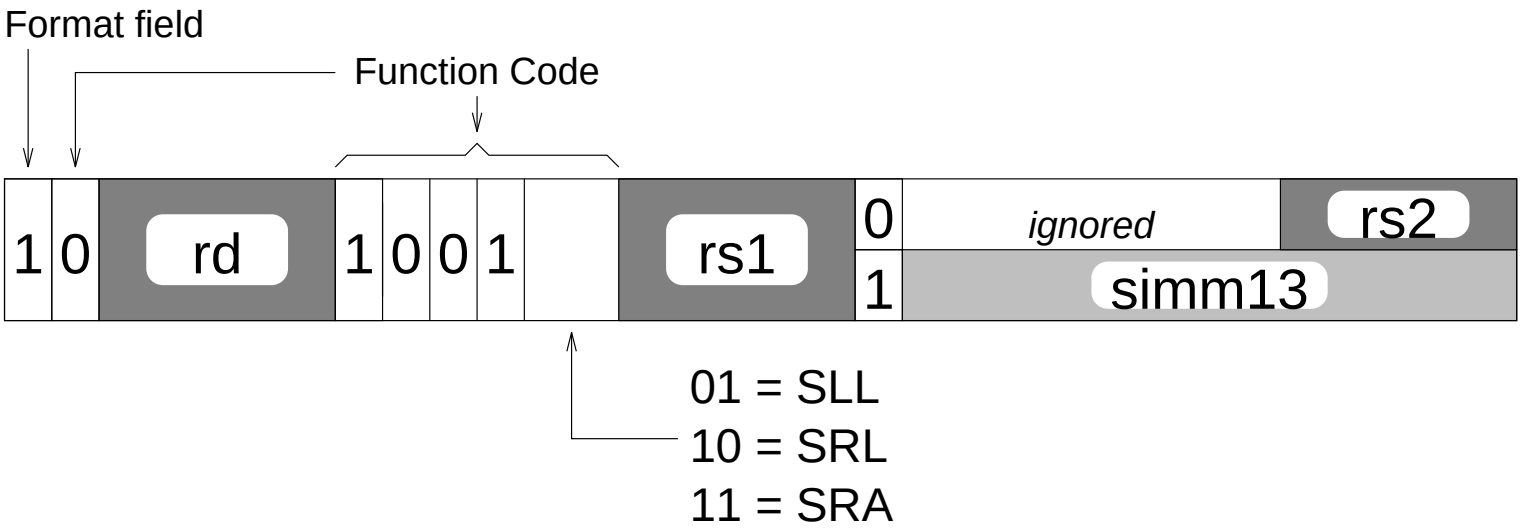

RISC

- Load and store instructions use similar instruction formats.

`LD [R3+R7],R5`	$MAR' \leftarrow R3 + R7$
	$R5' \leftarrow mem(MAR)$
`ST R1,[R4+5]`	$MAR' \leftarrow R4 + 5$
	$mem(MAR)' \leftarrow R1$

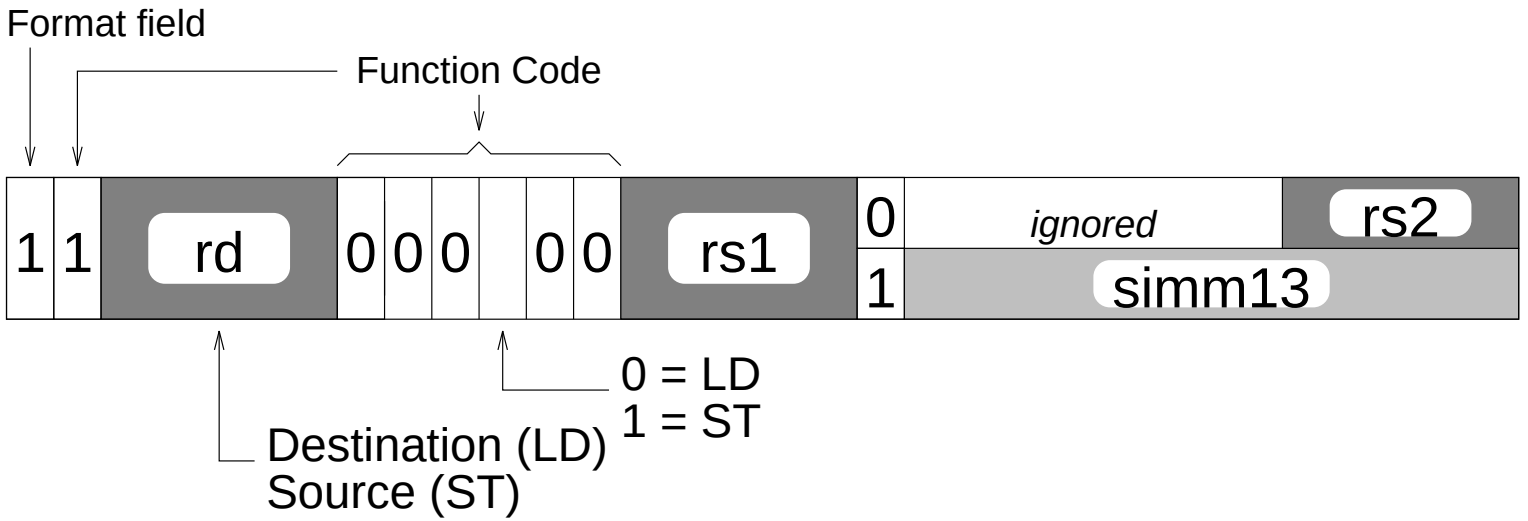

- Control Transfer instructions.

CALL

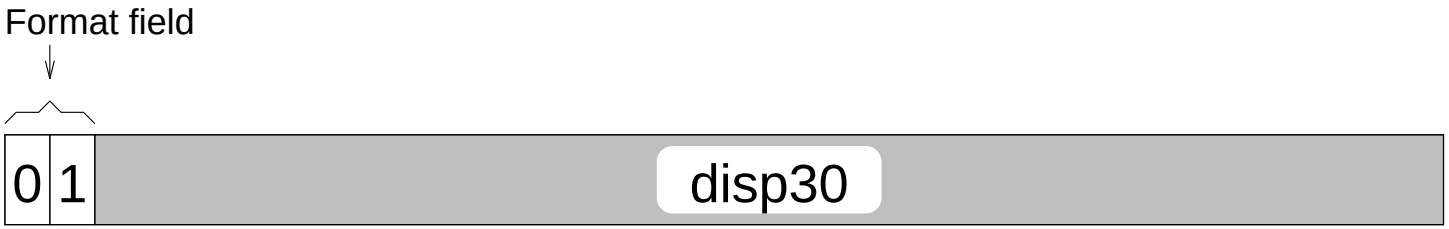

Since instructions are word aligned, any location within the 4 GByte address space may be accessed via the `CALL` instruction[7].

`CALL` *label*

$$R15' \leftarrow PC$$
$$PC' \leftarrow PC + (disp30 * 4)$$

[7] A price is paid for this facility – R15 is fixed as the register storing the return address

- Control Transfer instructions.

`Bicc`

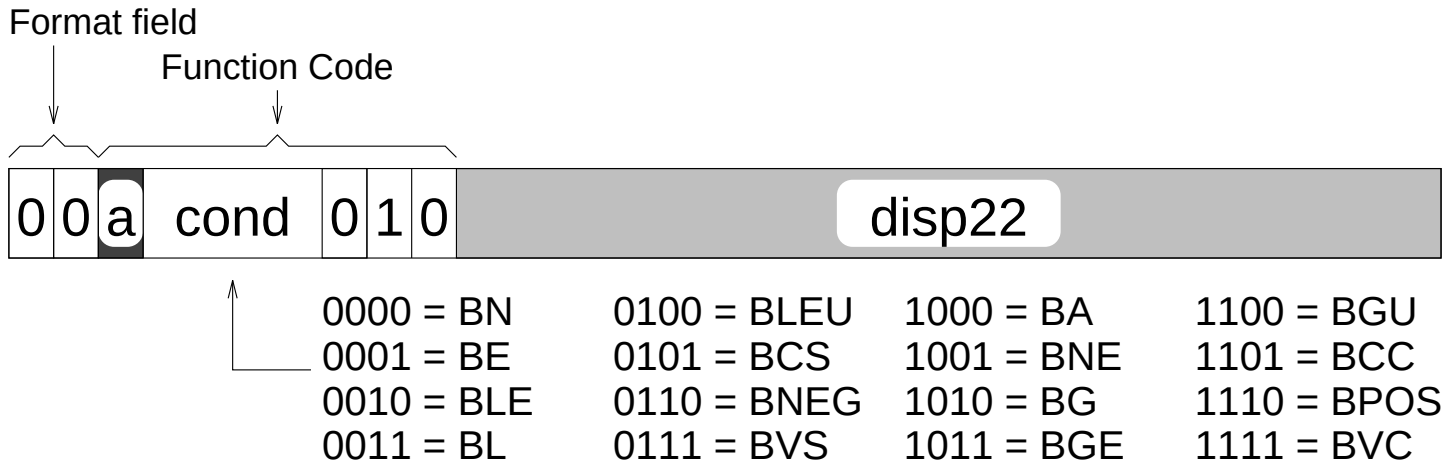

The conditional branch instructions have a shorter range since they need eight bits to specify the branch condition and the annul[8] status.

`BNE` *label* If $(Z = 0)$ then $PC' \leftarrow PC + (disp22 * 4)$

[8] not documented here

- Control Transfer instructions.

JMPL

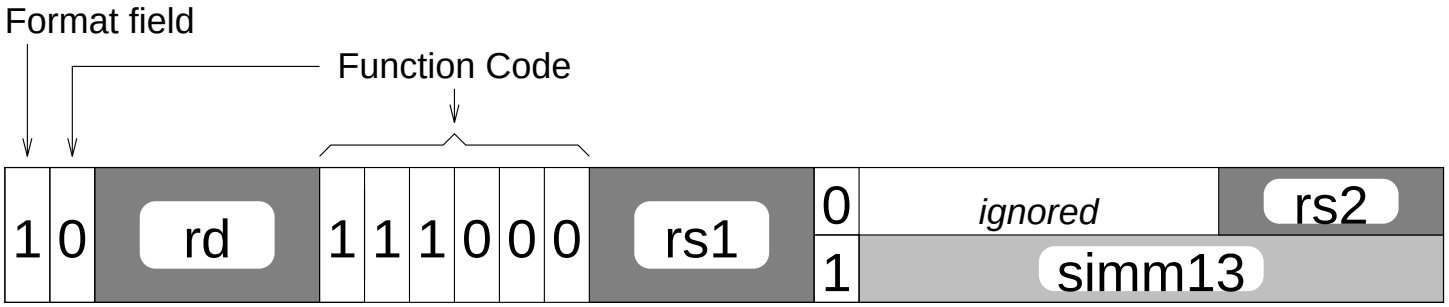

This instruction allows a register indirect jump. Since it saves the old program counter it may be used to jump to or return from a subroutine.

`JMPL rs1+rs2,rd` $rd' \leftarrow PC$

$PC' \leftarrow rs1 + rs2$

The documentation given here for control transfer instructions has omitted any mention of the pipelining and register window features of the SPARC specification. The resulting description is self consistent but inaccurate.

- Using an `ADD` instruction we can set the value of a register in the range -4096 to +4095[9].

`ADD R0,simm13,rd` $rd' \leftarrow simm13$

- The `SETHI` instruction enables the setting of the more significant register bits.

`SETHI imm22,rd` $rd < 31 : 10 >' \leftarrow imm22$

$rd < 9 : 0 >' \leftarrow 0$

[9]note that the signed immediate is sign extended before placement on the **s2** bus
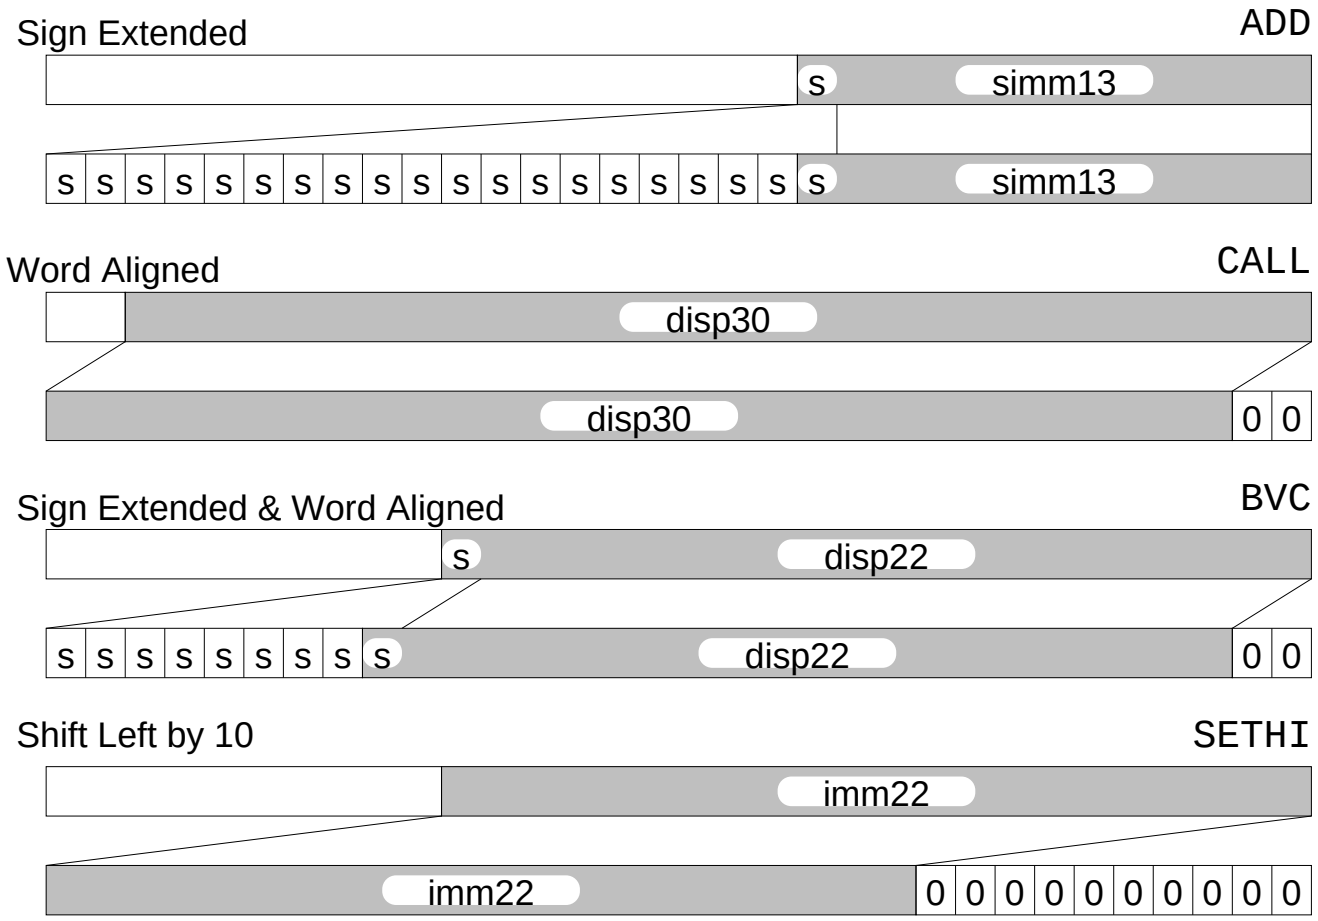
- Manipulation of immediate and displacement values: